




# FEED VIEW WINDOW in HOPPER

3-11106

## Assembly Instructions

**IMPORTANT!** Feed View Windows must be located in the **upper third** of a Hopper Panel.  
Using the FVW Clamping Washer (Item 4) as a template:

1. Mark the Hopper.
2. Cut the window hole.
3. Drill mounting holes.

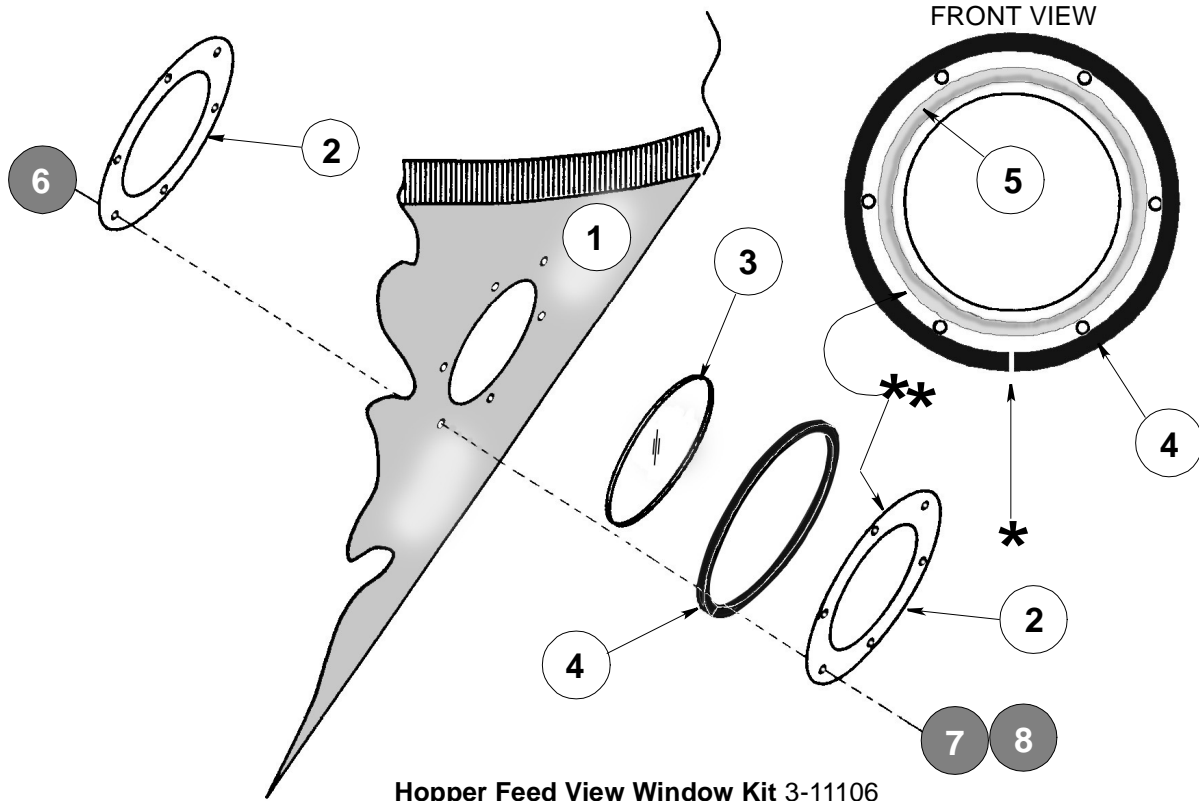

Hopper Feed View Window Kit 3-11106

Item	Part No.	Description	Qty.
1	varies	Hopper Panel	1
2	3-11089	FVW Clamping Washer (**inside face of Outside Clamping Washer)	2
3	3-13643	FVW Plastic Window	1
4	3-13008	Pres-Stik 3/8 x 1/4 x 2"; *Locate joint at bottom. [9.5 x 6.4 x 51 mm]	1
5	3-12600	Caulking - just inside Bolt circle	2 ft. [610 mm]
6	39-20004	1/4 x 1" Hex Head Bolt Gr. 8.2	6
7	39-20154	5/8 x .264" Weather-R-Seal Washer	6
8	39-20019	1/4" Jam Nut	6